





Lanshan 1 & Lanshan 1 Pro

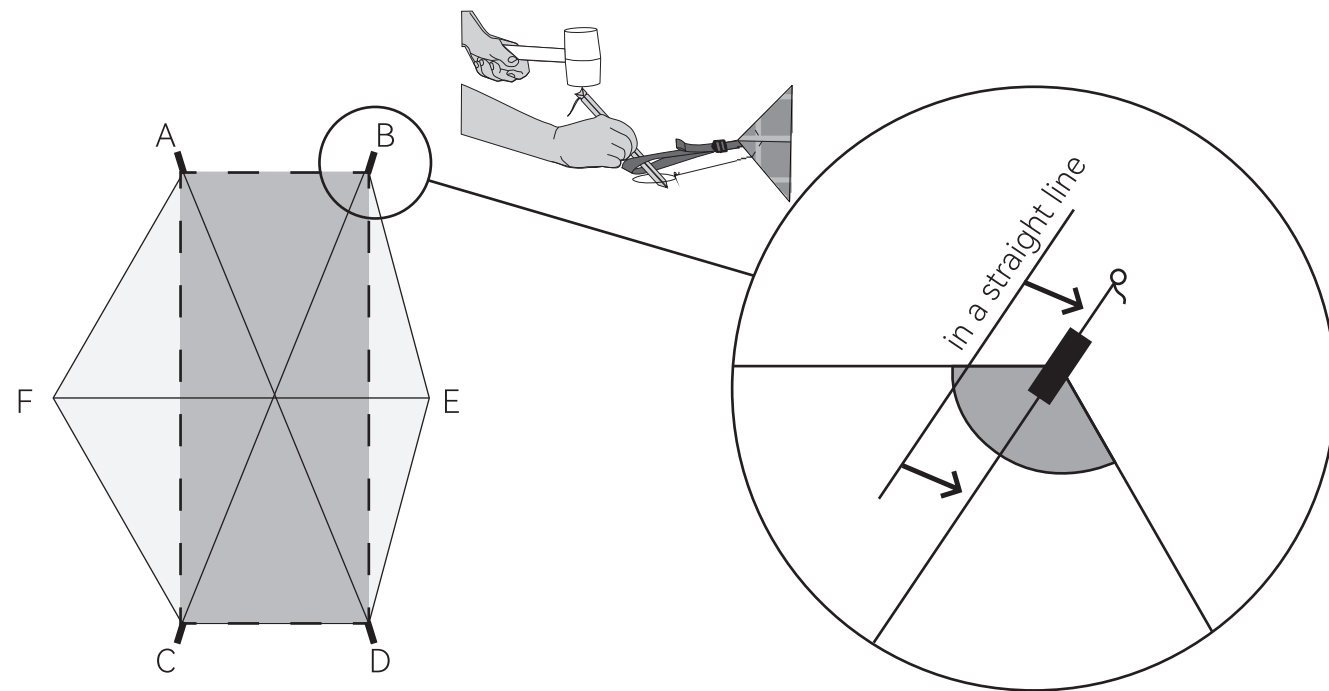


Step 1: Secure the four corner pegs (A, B, C, D) to form a perfect rectangle.
(Do not install pegs E and F at this stage.)
Align the corner's guyline with the tent's ridgeline (seam) in a straight line to enhance stability

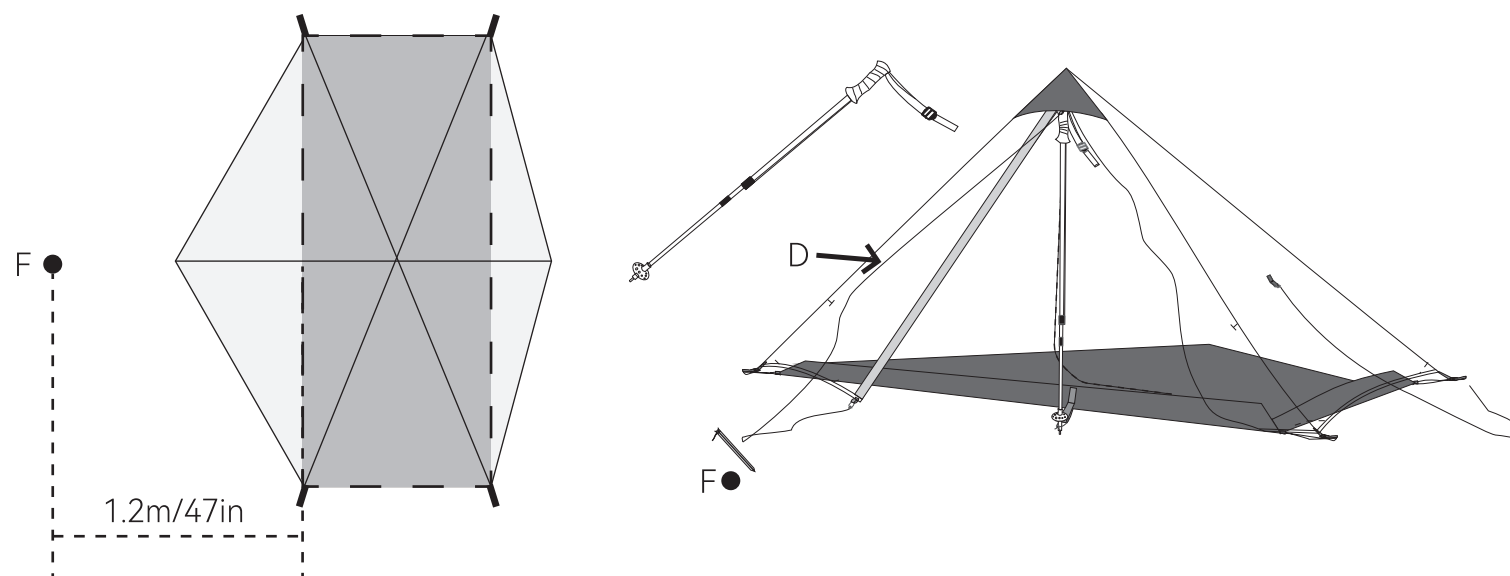

Step 2: Install peg F 1.2m (47 inches) from the inner tent.

Use a 1.2m-1.25m trekking pole to raise the tent structure
Attach the vestibule guyline G to peg F

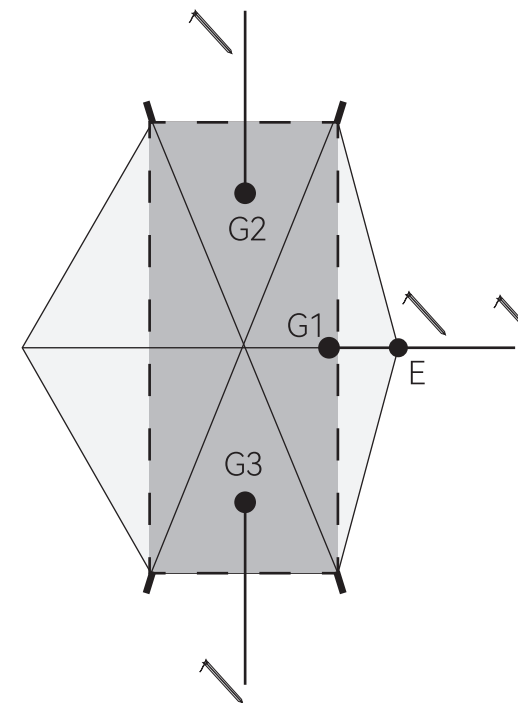


Step 3: Setting Up Peg E & Guylines

Pull point E outward and secure it with a peg.
Attach guylines to anchor points G1, G2, G3, then secure them with pegs.

Pro Tip: Longer guylines improve wind resistance but may encroach on neighboring campsites.

Peg Angle Recommendation:
For maximum holding power, insert all pegs at a 45° angle away from the tent.

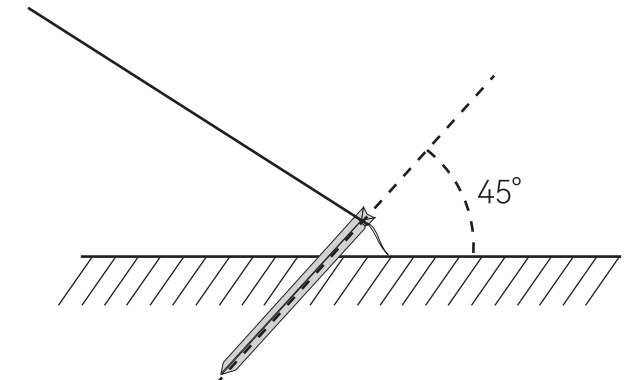

Important Safety & Maintenance Guidelines

Campsite Preparation

Thoroughly clear the ground of sharp objects (rocks/twigs) before pitching to prevent floor damage.

Fire Hazard Warning

Absolute prohibition: No open flames/stoves inside the tent.
Silicone-coated fabric ignites easily.

Storage Protocol

Must dry completely before long-term storage to prevent mold and fabric degradation.

Danger Zone Camping Ban

Avoid pitching near:

- Dead trees (falling risk)
- Riverbanks (flash floods)
- Mountain passes (wind tunnels)
- Cliff bases (rockfall)
- Unstable slopes (landslides)

We offer free lifetime repairs for all tents purchased through 3FULGEAR official stores and Authorized dealers

Need service?
Email us: support@3fulgear.com

More info:
www.3fulgear.com